



DIRECTV CHANNEL CHANGE PROCEDURE

1. Turn on the test **TV** in the Head-End (H/E) equipment rack
2. **Tune** the TV to the desired **TV Channel** (ch 2, 3, 4, etc)
3. Locate the **DirecTV Receiver** (Shown below) associated with the TV channel (2 ABC, 3 CBS, etc) in the H/E rack. The receiver may be in a vertical orientation.



4. Press the **GUIDE** button on the receiver until you see the screen below



5. Move the highlight (yellow box) by pressing the **DOWN** arrow to the desired category (local channels if tuning to a local channel)
6. Press **SELECT** button on the receiver
7. Use the **UP** or **DOWN** arrow to navigate to the desired **DirecTV Channel** (the yellow highlight should be in the current program as shown below)



8. Press the **SELECT** button to complete the tuning of the receiver
Repeat the procedure on each TV channel as required